

Taking Ownership of a New Lockbox

1. Update your SentiCard.
2. Insert card in lockbox, ENT your Pin and press ENT, then press FUNC 1 ENT
3. Shackle will release.
4. Update your SentiCard again.

Taking Ownership of a New Lockbox

1. Update your SentiCard.
2. Insert card in lockbox, ENT your Pin and press ENT, then press FUNC 1 ENT
3. Shackler will release.
4. Update your SentiCard again.

Taking Ownership of a New Lockbox

1. Update your SentiCard.
2. Insert card in lockbox, ENT your Pin and press ENT, then press FUNC 1 ENT
3. Shackle will release.
4. Update your SentiCard again.

Taking Ownership of a New Lockbox

1. Update your SentiCard.
2. Insert card in lockbox, ENT your Pin and press ENT, then press FUNC 1 ENT
3. Shackle will release.
4. Update your SentiCard again.

Taking Ownership of a New Lockbox

1. Update your SentiCard.
2. Insert card in lockbox, ENT your Pin and press ENT, then press FUNC 1 ENT
3. Shackle will release.
4. Update your SentiCard again.